



INSTALLATION INSTRUCTIONS


Accessory
**LED HIGH MOUNT STOP
 P/N 08U70-MKC-L00**

Application
GL1800/B/BD/D/DA

Publication No.
MII
 Issue Date
January 2021


Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

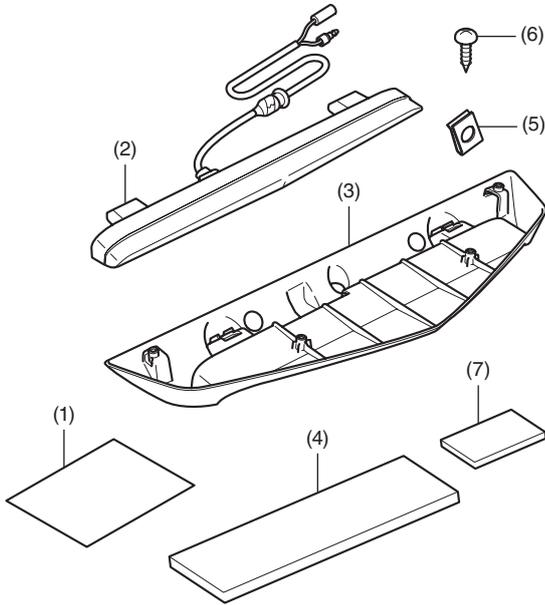

No.	Description	Qty
(1)	Installation Instructions URL	1
(2)	High mount stop light	1
(3)	High mount stop light base	1
(4)	Cushion	1
(5)	Spring nut	2
(6)	5 mm screw	6
(7)	Rubber	2


CHROME TRUNK RACK Sold separately

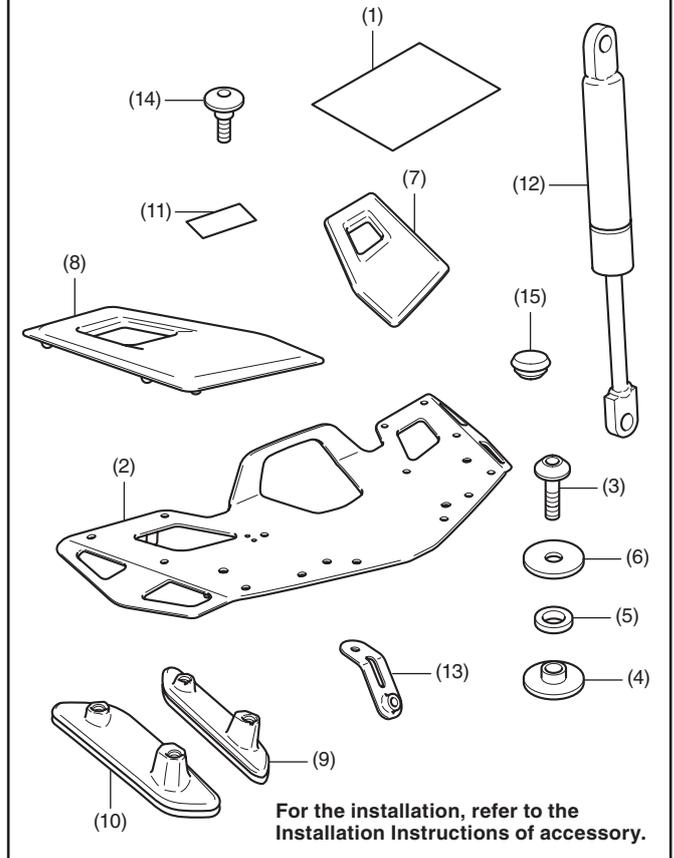

No.	Description	Qty
(1)	Installation Instructions URL	1
(2)	Trunk rack	1
(3)	6 mm bolt	4
(4)	Collar	4
(5)	Rubber washer	4
(6)	Washer	2
(7)	Right rack top cover	1
(8)	Left rack top cover	1
(9)	Right trunk rack cover	1
(10)	Left trunk rack cover	1
(11)	Label	1
(12)	Damper	2
(13)	Trunk rack plate	2
(14)	6 mm screw	2
(15)	Plug	1

TRUNK SUB HARNESS

Sold separately

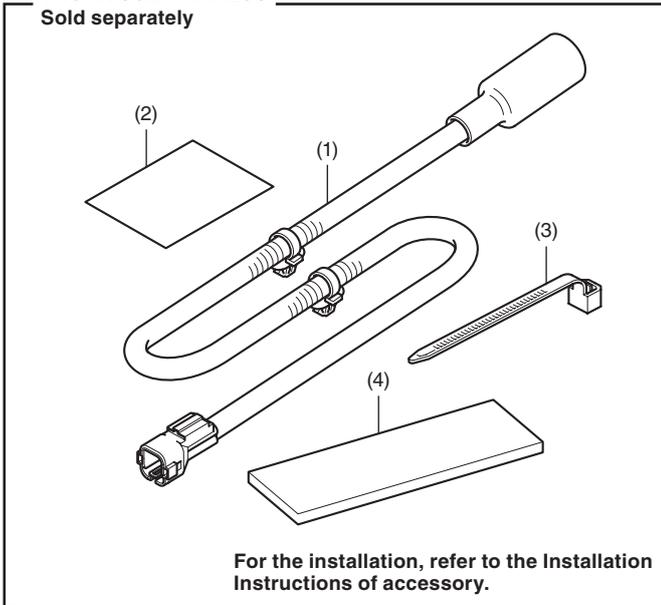

For the installation, refer to the Installation Instructions of accessory.

No.	Description	Qty
(1)	Trunk sub harness	1
(2)	Installation Instructions URL	1
(3)	Wire tie	1
(4)	Cushion	2

TOOLS AND SUPPLIES REQUIRED

Hex wrench (5 mm)

Phillips ® screwdriver

Synthetic detergent solution

(Water : Synthetic detergent / 100 : 1)

Marker

Scale

Isopropyl alcohol

Shop towel

Torque wrench

TORQUE CHART

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.

Item	N·m	kgf·m	lbf·ft
5 mm screw	4.2	0.4	3.1
6 mm screw	9	0.9	6.6
6 mm bolt	10	1.0	7

INSTALLATION


▲ CAUTION

- To prevent burns, allow the engine, exhaust system, radiator, etc., to cool before installing the accessory.



NOTE:

- Heat the bonding surfaces with a hair dryer if the ambient air temperature is below 70°F (21°C).
- The adhesive reaches full strength in 72 hours. Wait at least 24 hours before riding your motorcycle.
- Disconnect the negative (-) cable from the battery before installing this accessory.
- The memories of the clock will be erased when you disconnect the battery. Reset the memories after reconnecting the battery.
- Reinstall the removed parts on the motorcycle and make sure that the wires and harnesses are not pinched.


- Perform the step 1 to 30 on the chrome trunk rack (sold separately) installation instructions.
- Perform the step 32 to 40 on the chrome trunk rack (sold separately) installation instructions.
- Install the spring nuts as shown.

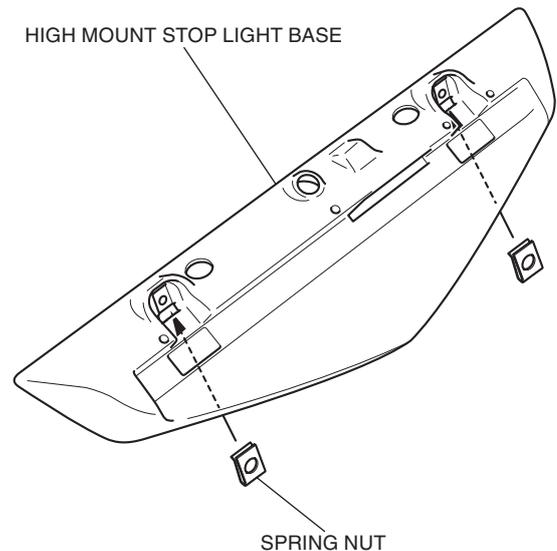


4. Attach the rubbers as shown.

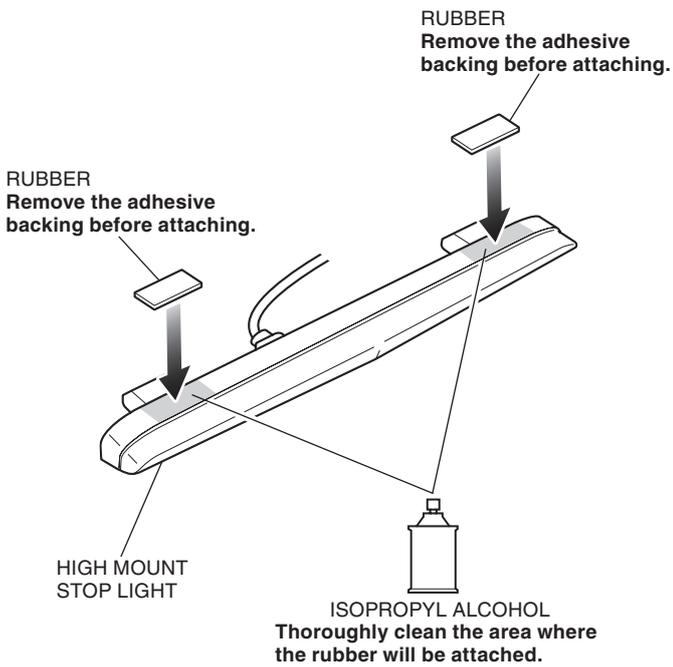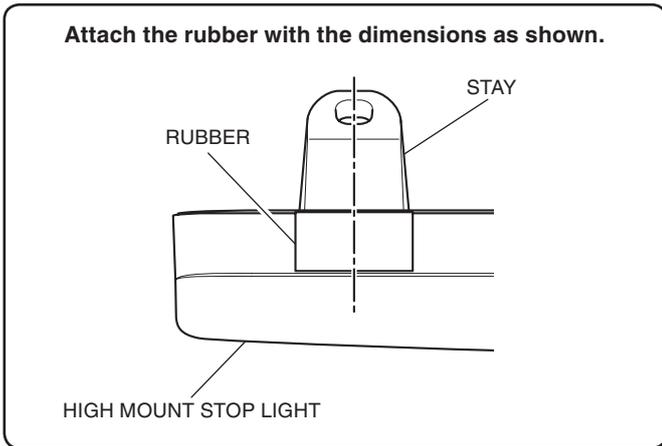


5. Mark the high mount stop light harness in the position shown.

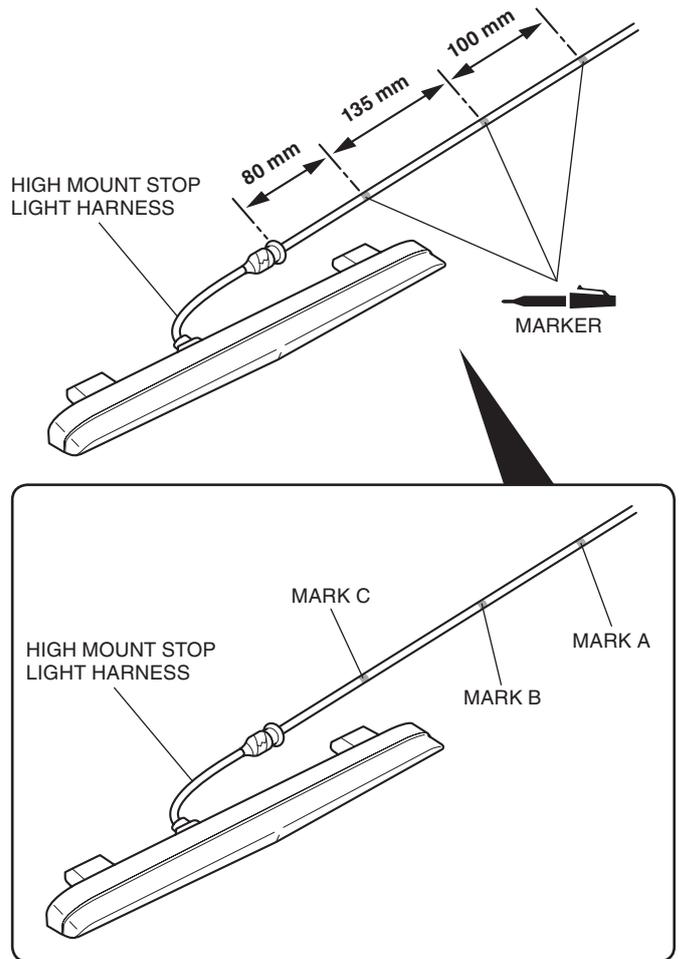

6. Route the high mount stop light harness as shown.

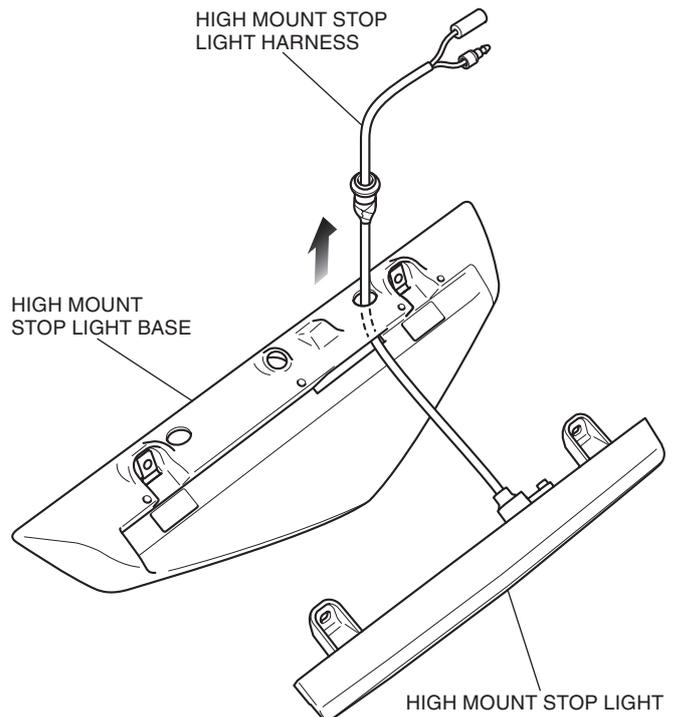


7. Install the high mount stop light as shown.


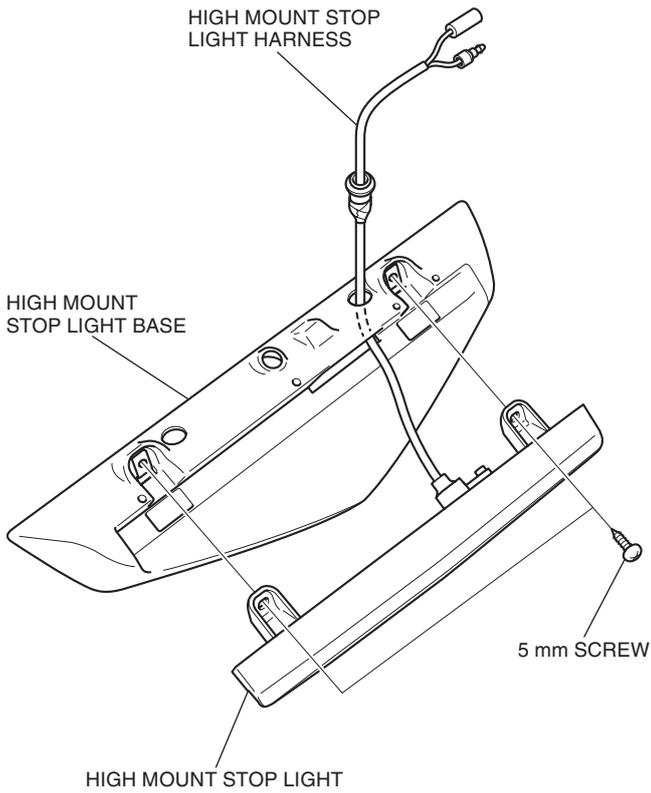


8. Remove the plug as shown.



- **Perform this step for the motorcycle equipped with the chrome trunk rack.**

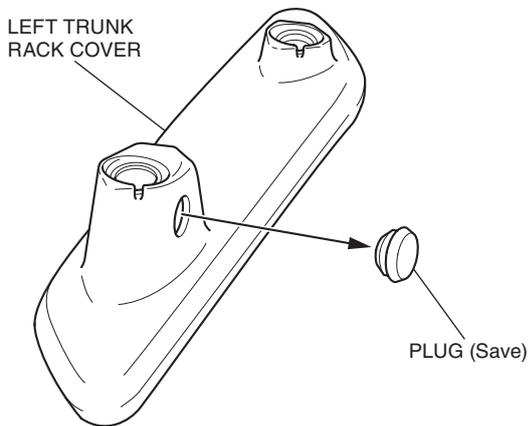


9. Route the high mount stop light harness as shown.

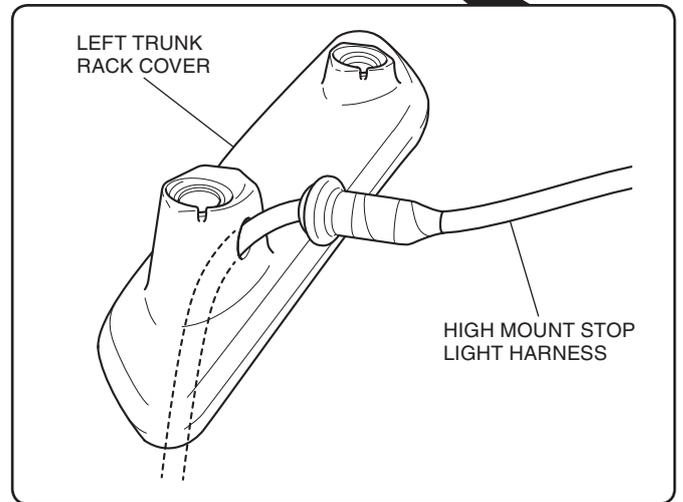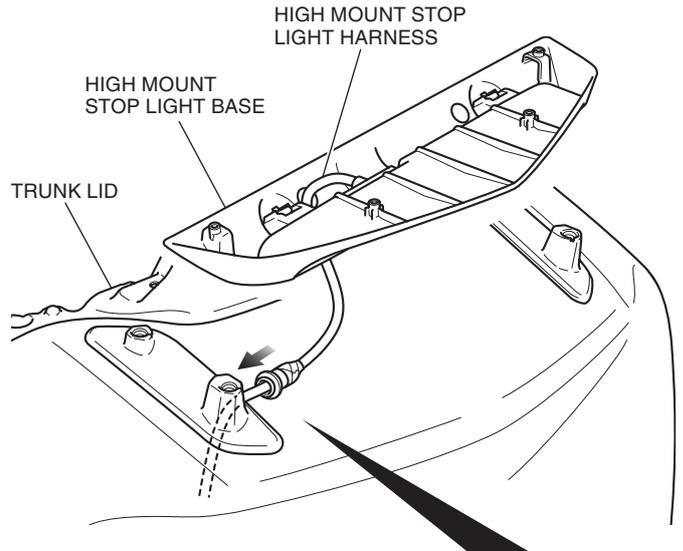


10. Install the high mount stop light harness in to the hole as shown.

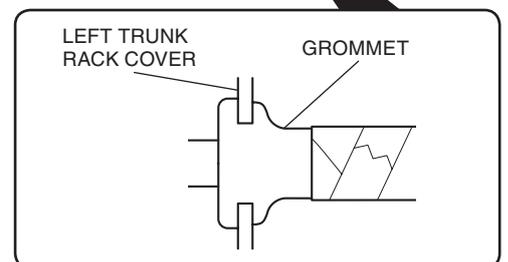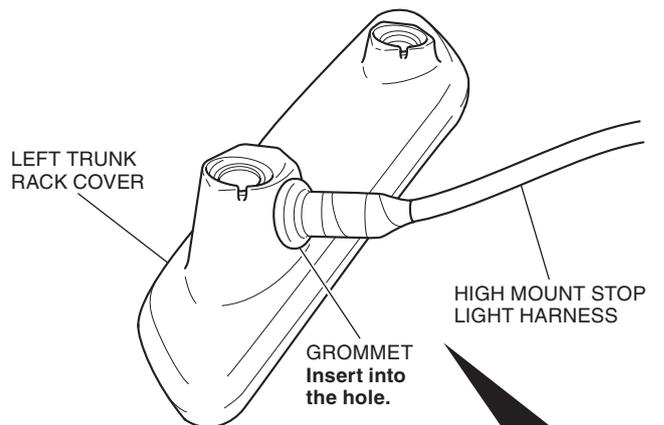



11. Clean the surface of the area shown using an isopropyl alcohol.

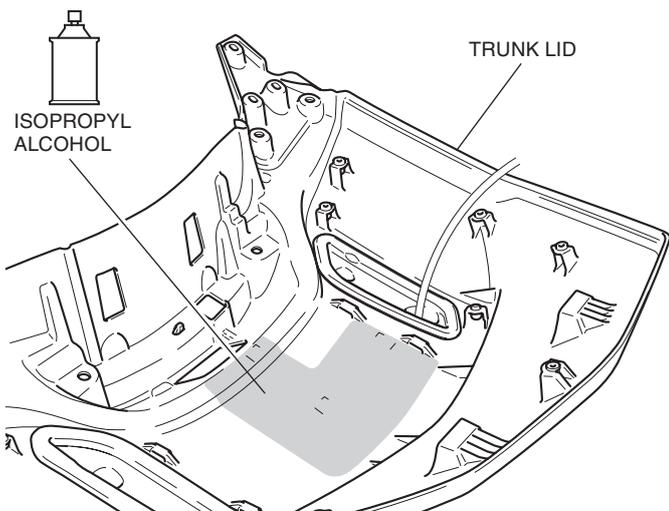

12. Cut the cushion to the dimensions shown.

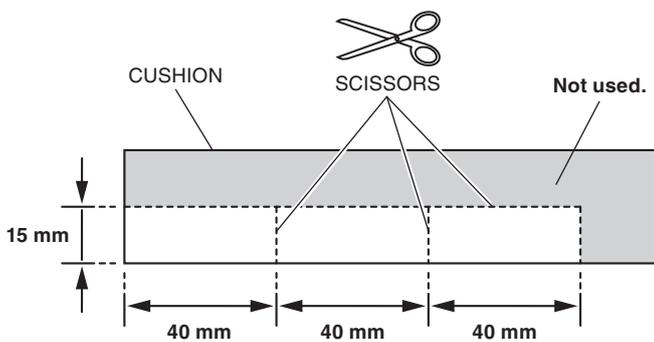


13. Attach the cushions as shown.

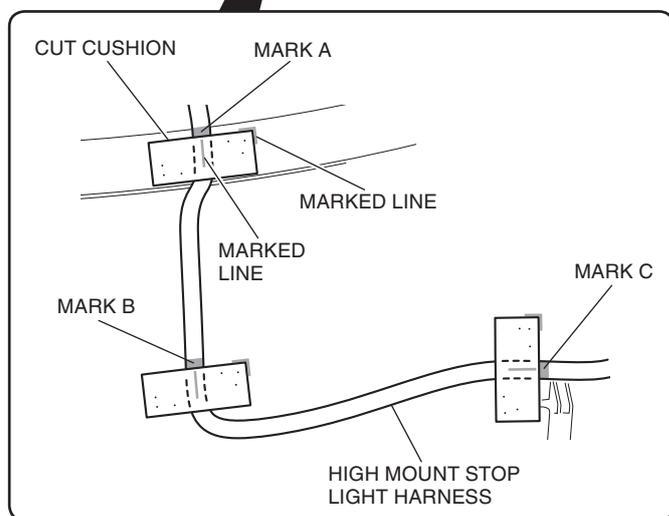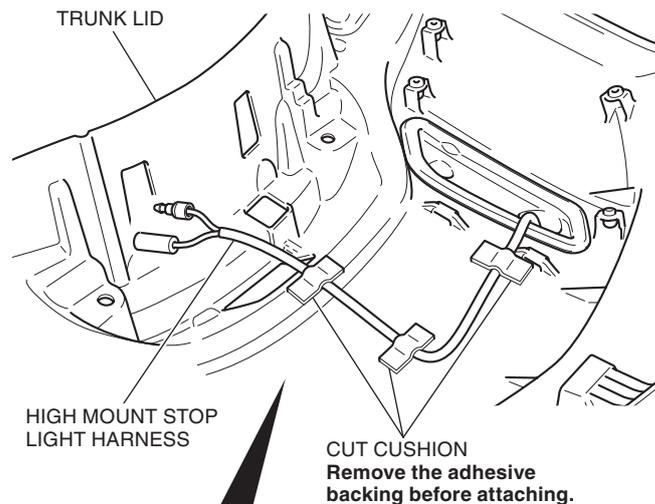


14. Perform the step 16 and 20 to 24 on the trunk sub harness (sold separately) installation instructions.

15. Connect the high mount stop light harness and install the inner trunk lid to the trunk lid as shown.



- **Confirm that any wire harness is not caught or too tight.**

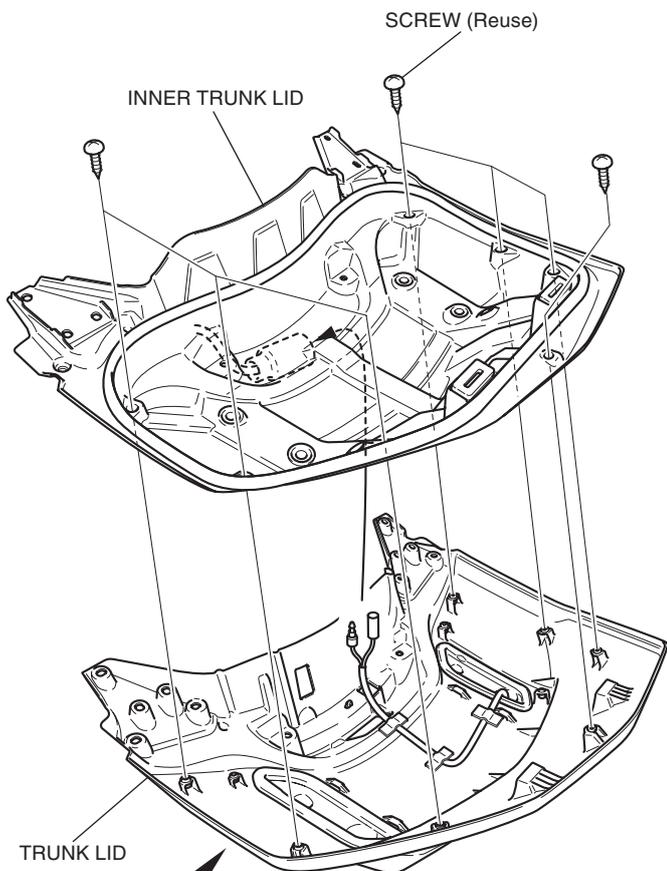

Install the trunk lid with care not to damage the  part.

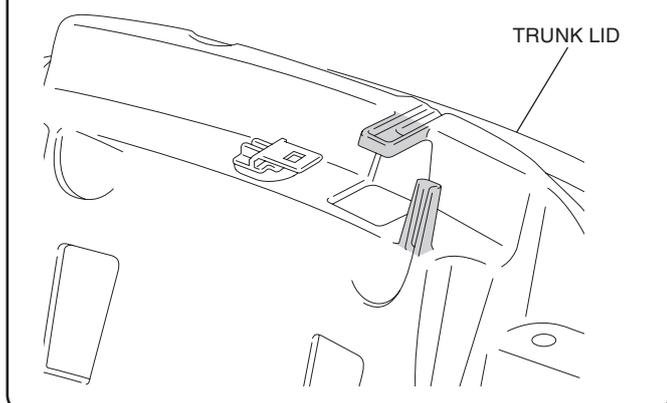


16. Store the terminal in the harness boot as shown.

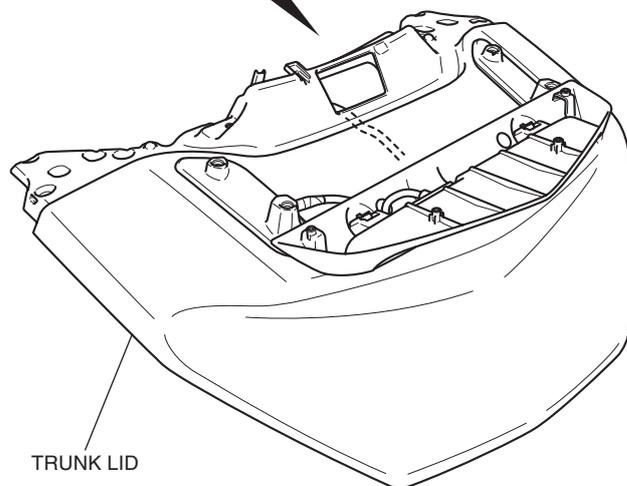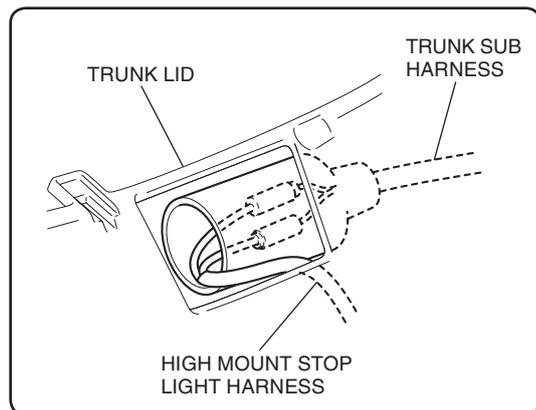


17. Perform the step 42 and 43 on the chrome trunk rack (sold separately) installation instructions.


18. Apply synthetic detergent solution to the position shown.

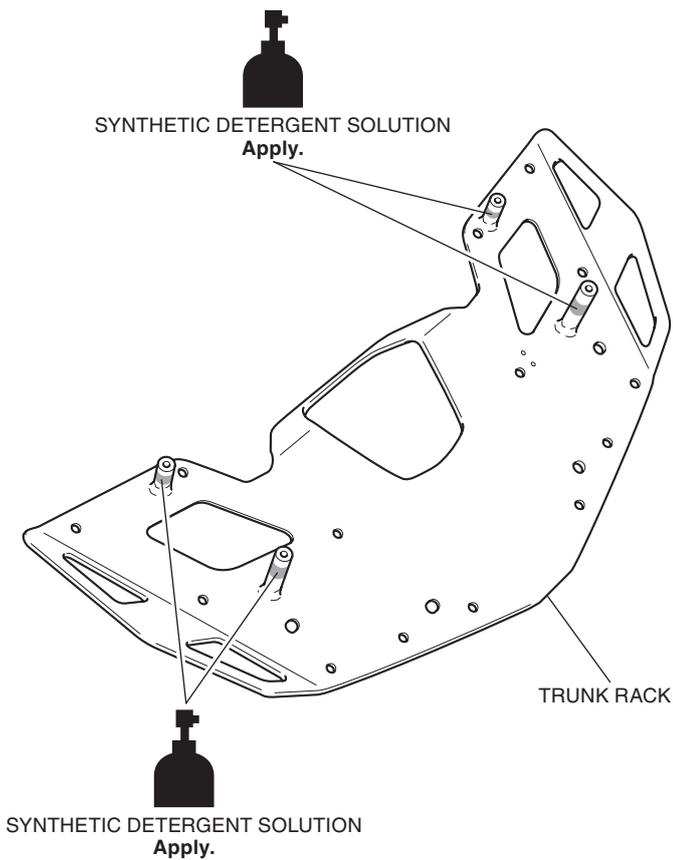

19. Install the trunk rack as shown.


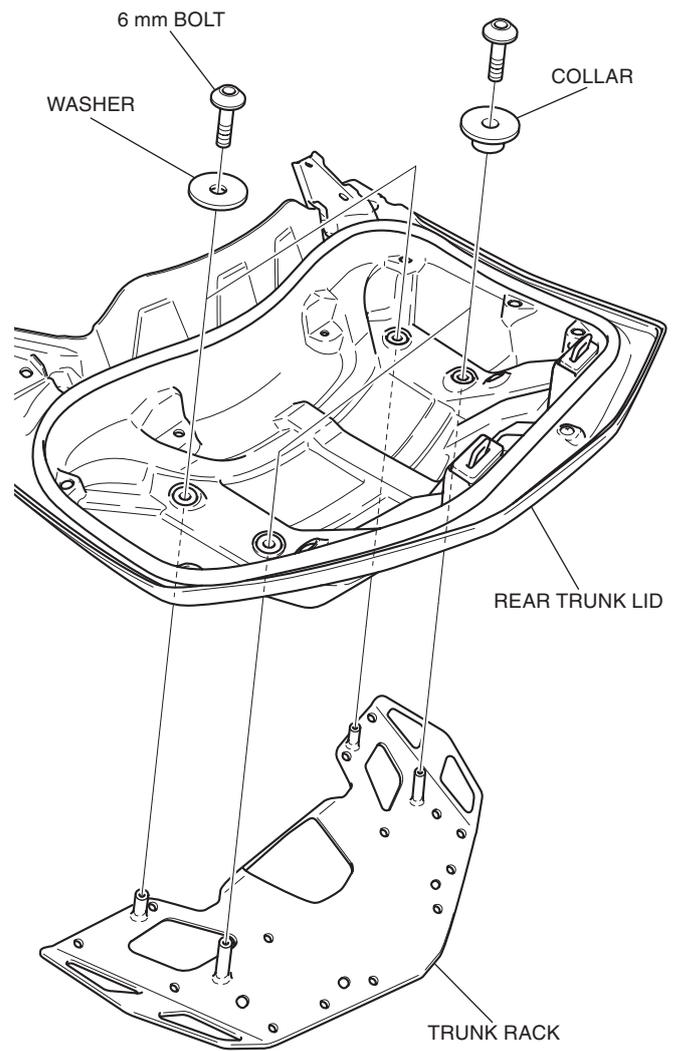


20. Install the high mount stop light as shown.

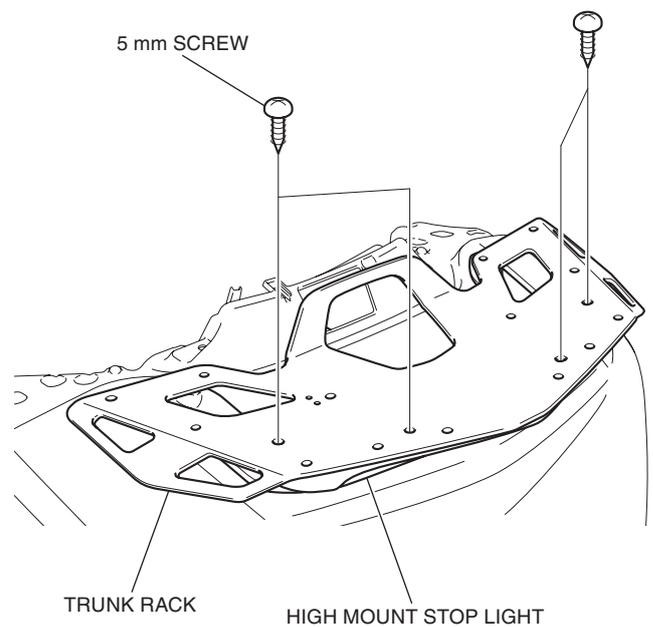

21. Install the left rack top cover as shown.

- Repeat on the right side.

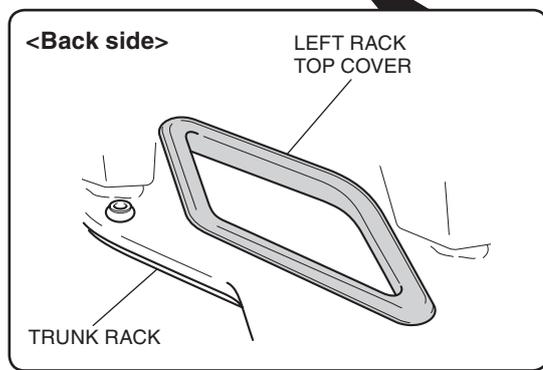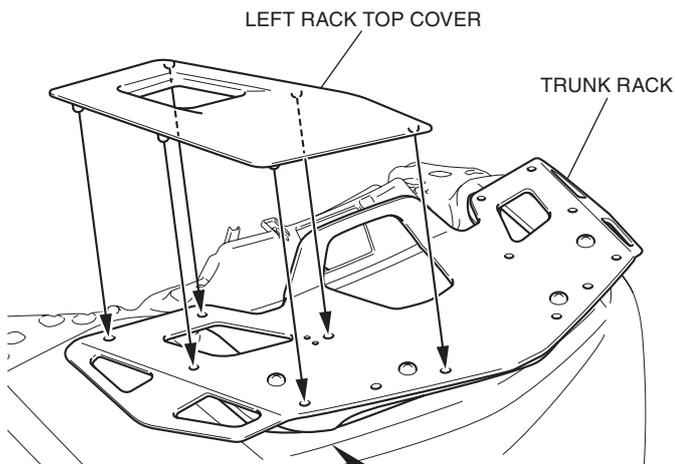

22. Install the rear trunk lid in the reverse order of removal.

23. Perform the step 26 to 32 on the trunk sub harness (sold separately) installation instructions.