



# INSTALLATION INSTRUCTIONS

Accessory

**FRONT BUMPER**  
P/N 08P70-HR3-HA0

Application

**TRX420FA2/FA5/FA6/  
FE1/FM1/FM2/TE1/TM1**

Publication No.


**MII 17151**

Issue Date

**November 2021**

**Honda Dealer: Please give a copy of these instructions to your customer.**

## PARTS LIST

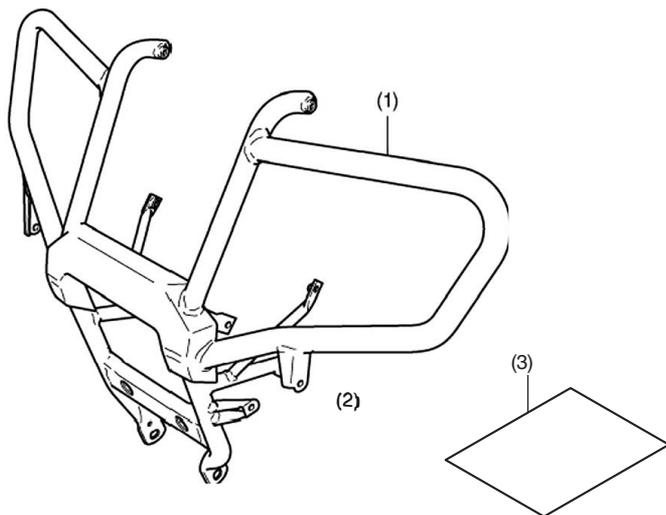

No.	Description	Qty
(1)	Front bumper	1
(2)	6 mm flange nut	2
(3)	Installation Instructions URL	1

## TOOLS

Socket (10 mm)  
Ratchet  
Torque wrench

## TORQUE CHART

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.

Item	N-m	kgf-m	lbf-ft
6 mm flange nut	1.0	1.0	7


## INSTALLATION INFORMATION

### ▲ CAUTION

- To prevent burns, allow the engine, exhaust system, radiator, etc., to cool before installing the accessory.

- Remove the bolts as shown.


<Under side>

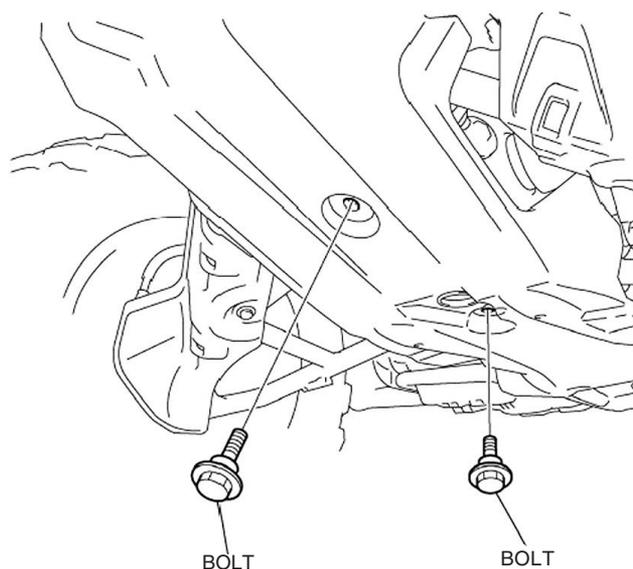



- Remove the bolts as shown.

- Repeat on the right side.

<Left side>

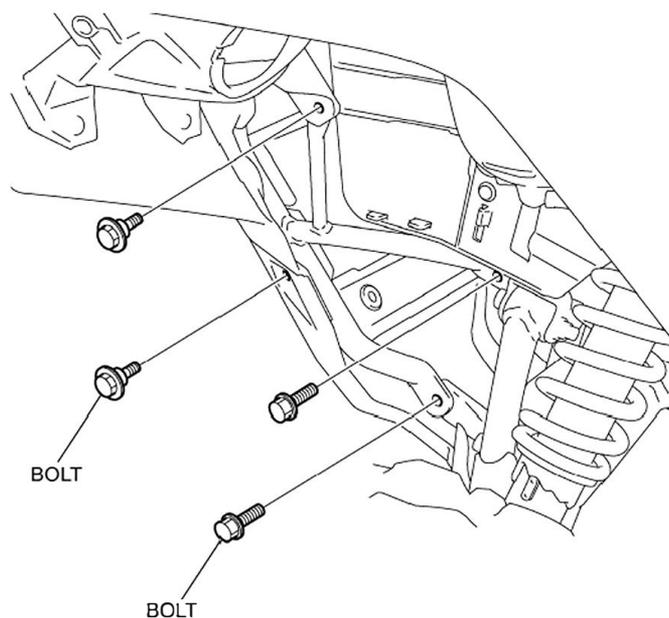


3. Remove the front bumper as shown.

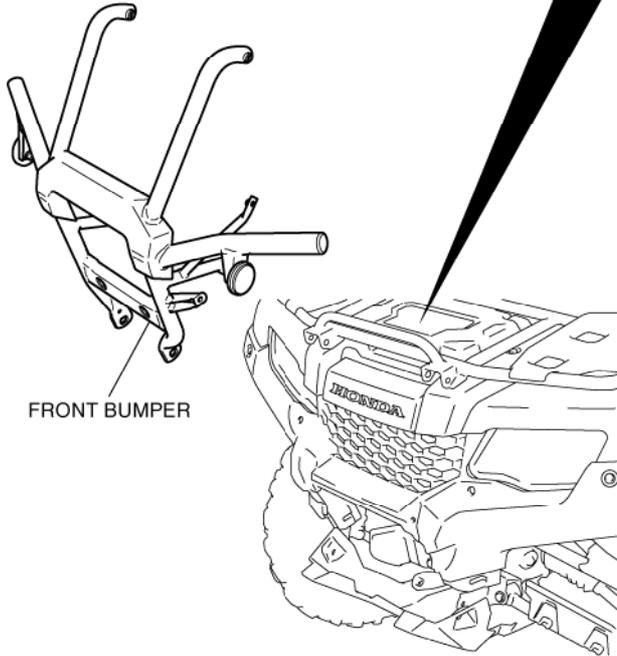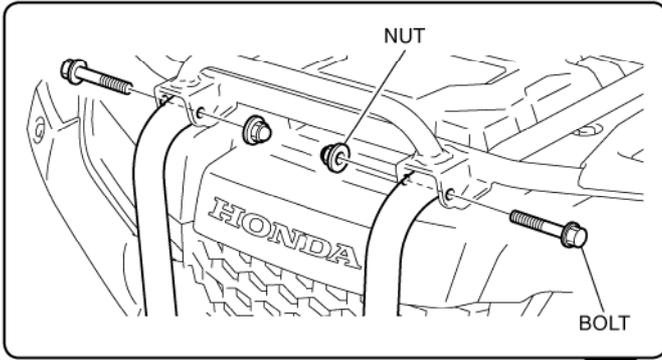

4. Remove the reflector as shown.


- Repeat on the right side.

<Left side>

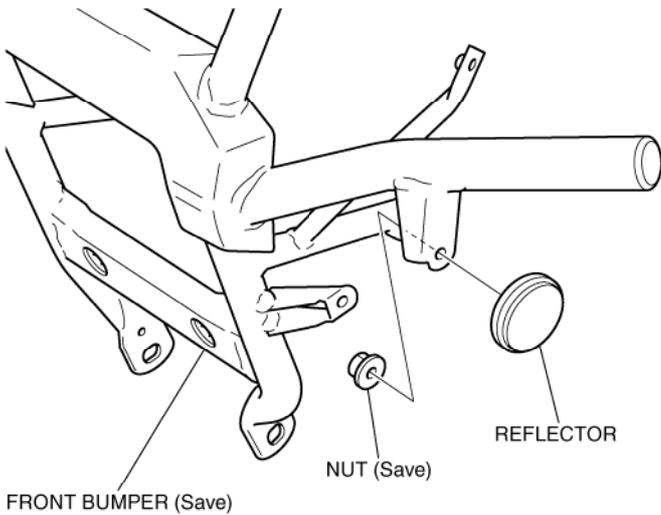

5. Install the reflector as shown.

- Repeat on the right side.

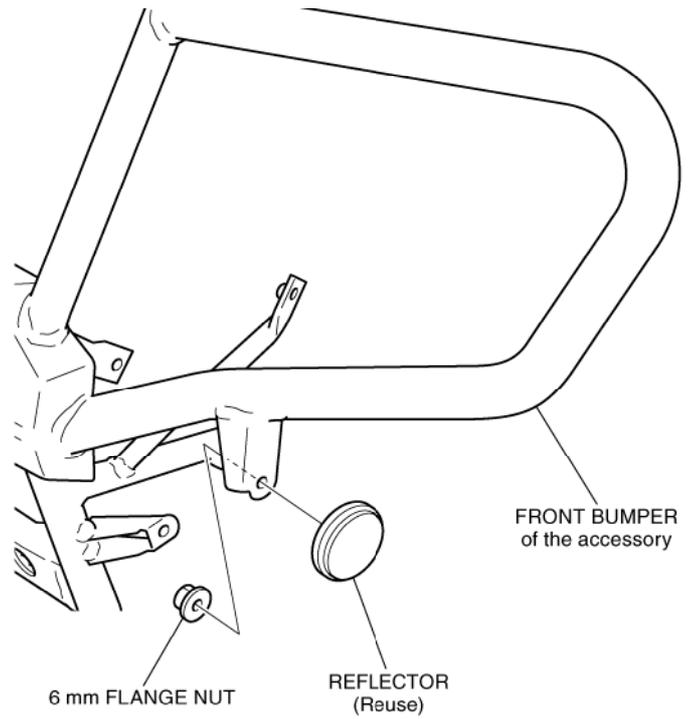

6. Install the front bumper of the accessory in the reverse order of removal.